


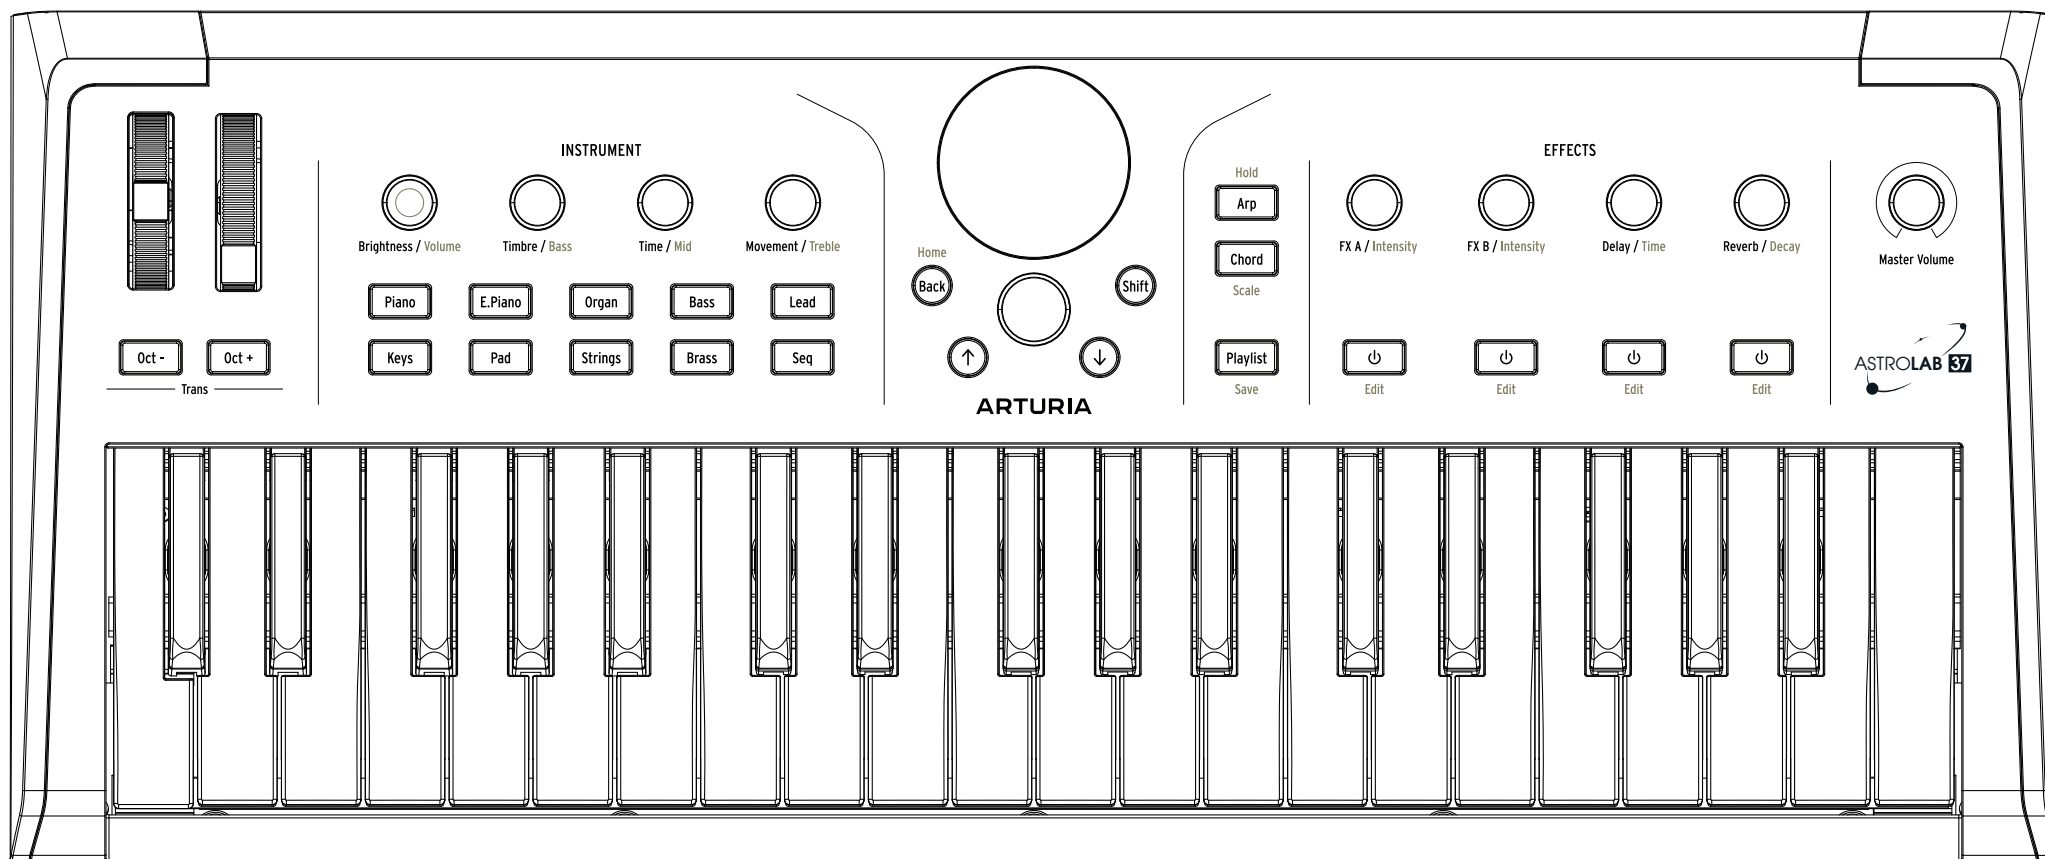

_Keyboard

Octave Transpose
Semitone Transpose
Reset Transpose

_Arpeggiator

Arp On/Off
Arp Hold
Arp Settings

_Chord / Scale

Chord On/Off
Scale On/Off
Chord Settings
Custom Chord

Oct- / Oct+
Shift + Oct-/Oct+
Oct- + Oct+

Short press Arp
Shift + Arp
Long press Arp

Short press Chord
Shift + Chord
Long press Chord
Hold Chord + Keyboard keys

_Navigation

Navigate Presets or Menus
Select Preset or Menu
Select Previous Preset or Menu
Select Next Preset or Menu
Edit Preset or Menu

Go to previous screen
Go to Home screen
Panic

_Master Control

Set Preset Volume
Set Master Bass
Set Master Mid
Set Master Treble

Turn Main encoder
Press Main encoder
↑
↓
Shift + Press Main encoder
or Long Press Main encoder
Back
Shift + Back
Shift + ↑ + ↓

Shift + Brightness
Shift + Timbre
Shift + Time
Shift + Movement

_Preset buttons

Filter all Presets by Type
Filter the current list by Type

Open/Close current Playlist
Save current Preset

_Effects control

Set FX A Intensity
Set FX B Intensity
Activate FX A/B/Delay/Reverb
Edit FX A/B/Delay/Reverb
Set Delay Time
Set Reverb Decay

Short press Preset buttons
Long Press Preset buttons
Playlist
Shift + Playlist

Shift + FX A
Shift + FX B
Short press ⏻
Long press ⏻
Shift + Delay
Shift + Reverb