

Important note: Following this procedure won't void product warranty but make sure to follow it carefully to avoid causing any potential damage to the ribbon and connector.

AUDIOFUSE X8 IN/OUT - Firmware Update process



TABLE OF CONTENT

Opening Unit Front Panel	2
Firmware Update Process	4



Opening Unit Front Panel (Applies both to X8 IN and X8 OUT)

1. Remove the 4 screws on the front panel with a **2mm Allen key**



2. Remove the screw located underneath the unit





3. Be careful when opening the unit as there is a short flat cable.
Make sure not to pull too hard to avoid damaging or disconnecting it



The USB-C type connector is on the left hand side.

4. Now, plug the interface with a compatible **USB-C type cable** to your computer, connect the power supply to the DC power input on the back of the unit and to a power source.
5. Press on the front panel “A” button to power up the unit and move to the next steps.

Side Note:

On Mac OS, you may be prompted to “Allow the accessory to connect” a few times. If so, make sure to “Allow” it otherwise device won’t be available:



 


FIRMWARE UPDATE PROCESS

1. Open the “**AudioFuse X8 IN & OUT Updater**” folder located aside of this document
2. Open the folder matching with your Operating System version (“**macOS**” or “**Windows**”) and double click on “**afx8-updater**” to launch the updater:


-On **Mac OS**: The updater will immediately start

-On **Windows**: A driver install pop-up will appear, make sure to click on “**Install**” and to let the install proceed till the end before closing the Window for the updater to start

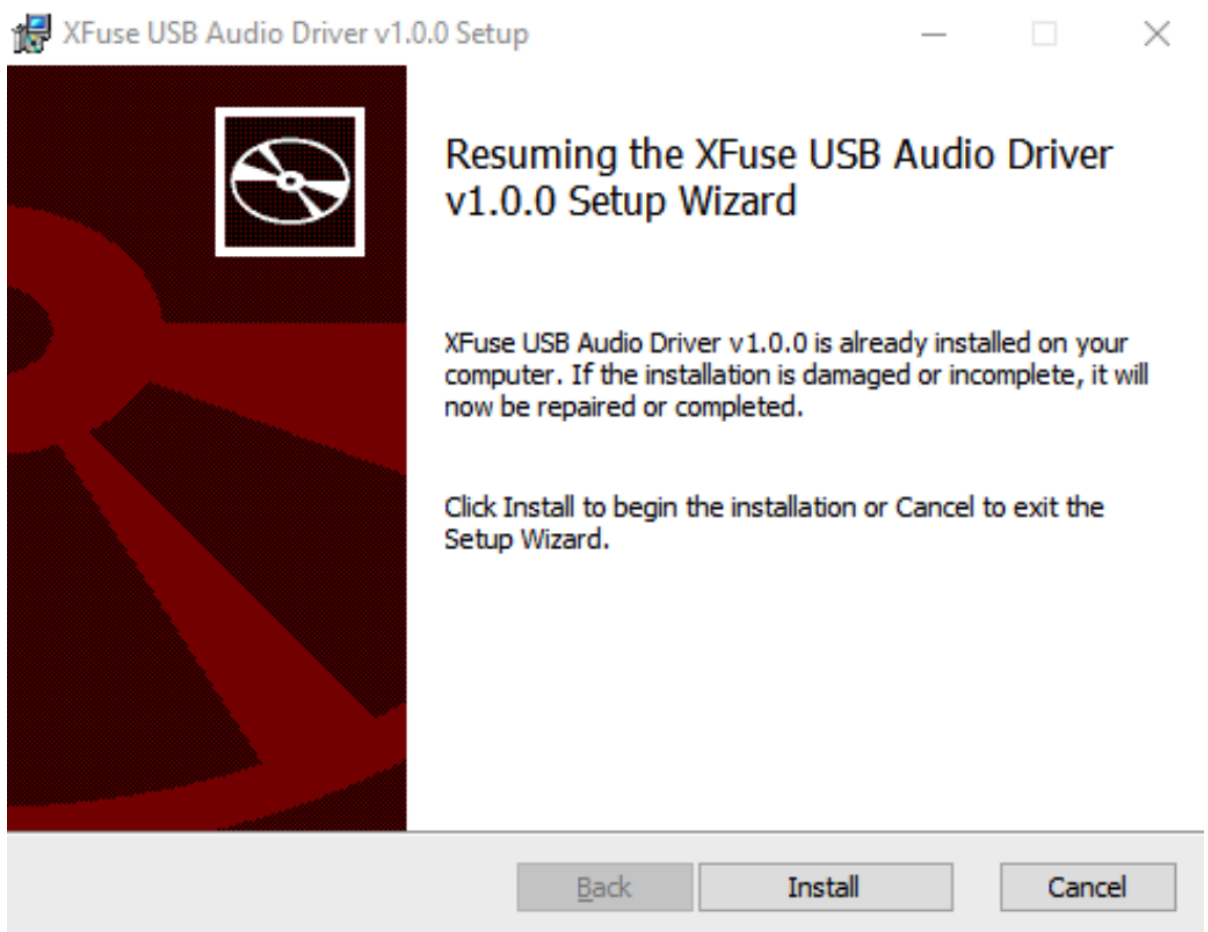



 3. Select the device you would like to update with the drop-down menu at the bottom of the interface as shown below:

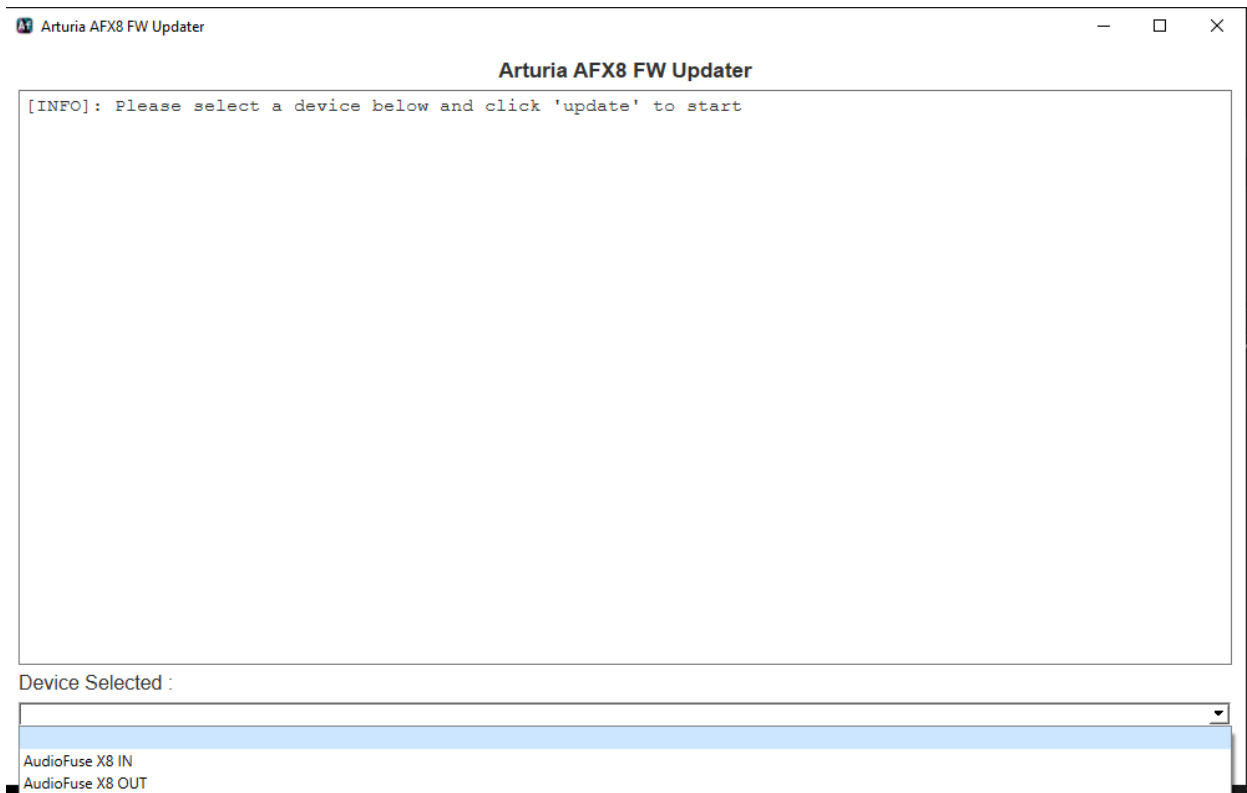


4. Once selected, click on the “**Update**” button:





 5. Make sure to let the update proceed till the end without interrupting the process:

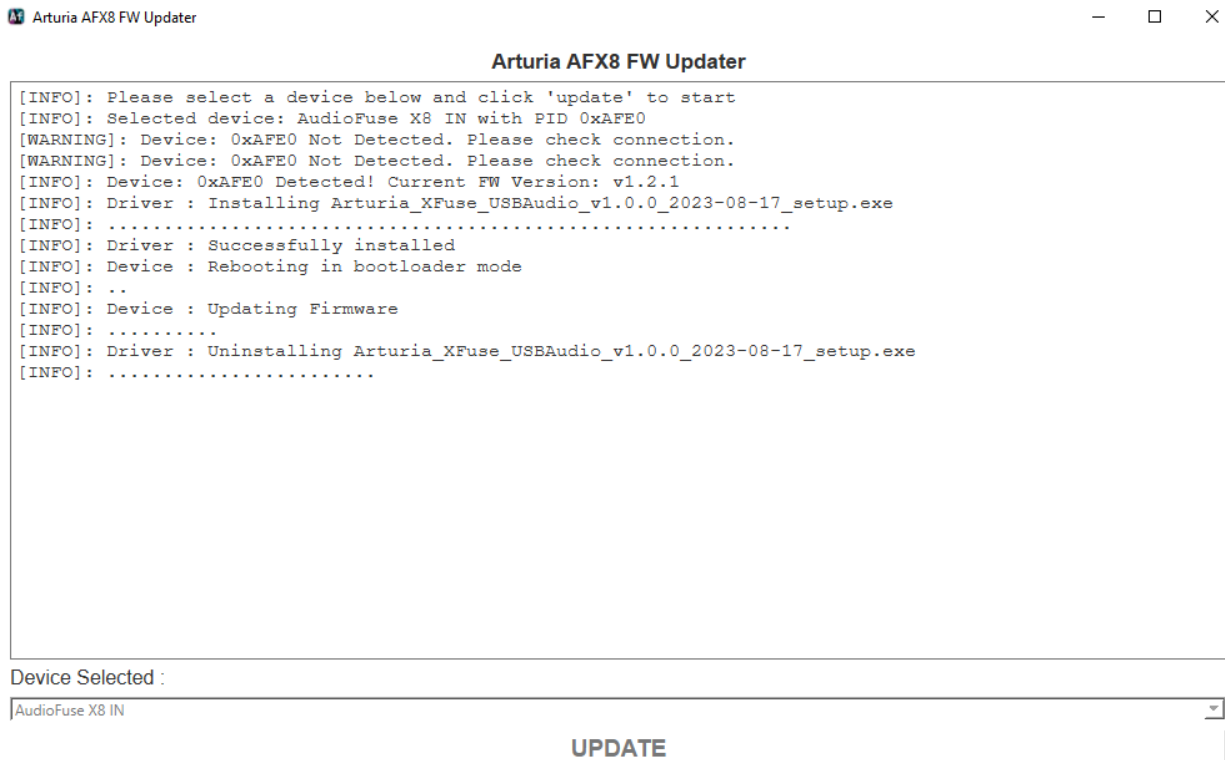

6. Once done, you will see a message: **Firmware update done - please verify FW version by clicking “check FW version”**





- Click on “**check FW version**”

Note:

If an error message appears “**Device : AFX8 not Detected, please retry**” make sure to just unplug the USB cable and to plug it back again

- Once done you should see the current “**FW version: v1.2.1**” displayed and a message confirming that the unit is now up to date

