



_MIDI Channel

Project track output MIDI Channel

Track button + Browsing Encoder

_Recall Saved State

Reload Pattern saved state
Reload Project saved state

*Shift + Save
Project + Shift + Press encoder*

_Global offset

Offset pattern steps Pitch
Offset pattern steps Gate
Offset pattern steps Velocity
Offset pattern steps Time shift
Offset pattern steps Randomness

*Shift + Pitch encoder
Shift + Gate encoder
Shift + Velocity encoder
Shift + Time Shift encoder
Shift + Randomness encoder*

_Step Edit

Erase Notes
Copy Notes
Paste Notes

*Erase + Press active notes keys
Copy + Press active notes keys
Paste + Press a key*

_Quick Edit

Edit Step Pitch
Edit Step Gate
Edit Step Velocity
Edit Step Time Shift
Edit Step Randomness

*Hold Step + Turn Pitch knob
Hold Step + Turn Gate knob
Hold Step + Turn Velocity knob
Hold Step + Turn Time Shift knob
Hold Step + Turn Randomness knob*

_Note Edit

Edit Note Pitch
Edit Note Gate
Edit Note Gate [Tie/Rest]
Edit Note Velocity
Edit Note Time Shift
Edit Note Randomness

*Hold note + Turn Pitch knob
Hold note + Turn Gate knob
Hold note + Press Tie/Rest button
Hold Note + Turn Velocity knob
Hold Note + Turn Time Shift knob
Hold Note + Turn Randomness knob*

_Transpose

Add/Remove a track from

Trans + Track button

the Transpose Group

Defines the transposition value
Resets all transpositions

*Trans + Key
Shift + Trans*

_Solo / Mute

Solo Track
Unmute All drums
Drum mute latch mode

*Shift + Mute
Shift + Drum
Mute + Drum*

_Drum

Select a track part silently

Hold Track 1 + Press drum key

_Chain

Create a pattern chain
Display chained patterns

*Hold Chain + press Steps
Hold Chain*

_Looper

Enable/Disable Looper
Change the loop's starting point

*Shift + Looper
Looper + Step*

_Project

Save Project
Copy Project
Paste Project
Erase Project

*Save + Project
Copy + Project
Paste + Project
Erase + Project*

_Scenes

Save Scene
Copy Scene
Paste Scene
Erase Scene

*Save + Scene
Copy + Scene
Paste + Scene*

Erase + Scene

_Patterns

Save Track Patterns
Save Pattern
Copy Pattern

*Save + Track
Save + Pattern
Copy + Pattern*

Paste Pattern
Erase Pattern

*Paste + Pattern
Erase + Pattern*

_Pages [16-32-48-64]

Copy Page
Paste Page
Delete Page

*Copy + Page
Paste + Page
Delete + Page*

_Control Mode

Set CC value on a step [Step Edit]
Delete CC from a step [Step edit]
Set CC value on a step [Quick Edit]
Delete CC from a step [Quick edit]

*Select step + Turn encoder
Erase + Encoder
Hold Step + Turn encoder
Hold Step + Erase + Encoder*

_Split Mode

Enable/Disable Split

*Hold a Track button + another
Track button [no drums]*

_Metronome

Change metronome Time Div
[1/4, 1/8, 1/16, 1/32, Triplet]

Hold Metronome + Time Div

_Reset factory

Reset Factory Shortcut

Hold Octave buttons + Power up

_Transport

All notes OFF

Tap 3 x Stop

_Program Change

Enter the Track Settings
Enter the Program Change assign menu
Select the pattern
Select the track
Select Value
Send the Program Change
Exit "Program Change Assign"

*Shift + Track
Turn encoder + Select PC assign
Press Pattern
Press Track
Turn encoder
Turn encoder
Press exit*